


Foldit[®] UTILITY CART

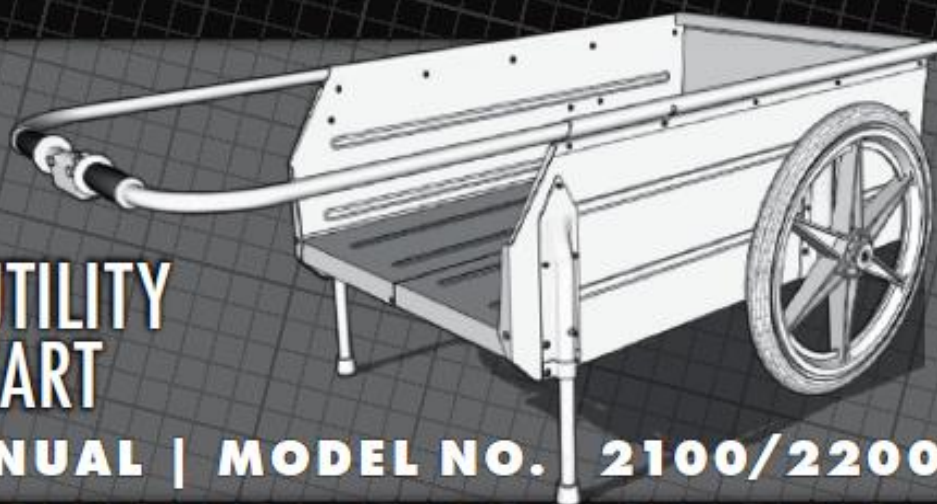


OWNER'S MANUAL | MODEL NO. 2100/2200

Thank you for choosing a Foldit collapsible utility cart! For future reference, please save this owner's manual. It is important that you read the entire manual to become familiar with this product before you begin using it.

UNPACKING AND ASSEMBLY

1. Carefully remove all contents from the shipping carton. Locate all parts before beginning assembly and discarding packaging.
2. Remove Front Gate from the side of the cart and set aside.
3. Using the screwdriver provided remove the hubcap, lock washer and screw from the end of the axle tube on each side of cart.
4. Lubricate the axles and the wheel bushings using the grease provided in the packet. Wheel bushings are located on the hub of the wheel.
5. Install wheels onto axles.
6. Reinstall the hubcap, lock washer, and screw in order on each side of the cart. Tighten securely, taking care not to cross-thread the screw.
7. Slide legs tubes into the pockets until the button protrudes to the outside.

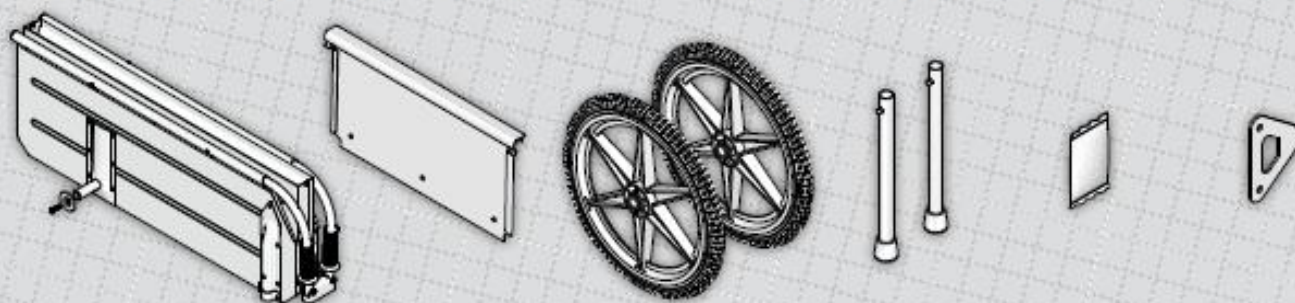

CONTENTS: ■ FolditCart ■ FrontGate ■ WheelAssembly (x2) ■ LegTube (x2) ■ GreasePacket ■ Screwdriver

WARNING

- Read and understand instructions included in this manual for assembly and operation. Failure to follow all instructions may result in serious injury.
- Do not allow others to assemble or operate this product until they have read and understand the instructions.
- The warnings, cautions and instructions discussed in this owner's manual cannot cover all possible conditions or situations that could occur.

GENERAL SAFETY


- This cart is not designed to transport people or animals.
- This cart is not a toy, do not allow children to operate or play with it.
- Do not make any modifications to this cart, unauthorized modification may impair the safety and/or function of this product.
- Care should be taken to avoid finger injuries while folding and unfolding the cart. Work gloves should be worn while folding and unfolding the cart.
- Regularly inspect cart for damage and/or wear that may affect the integrity of the cart.
- Pneumatic tires must be inflated to the recommended tire pressure of 35 PSI using only a hand pump. Do not over-inflate pneumatic tires.
- Do not stand or sit on cart or use as a work surface.
- Do not exceed the 330 lb. load capacity of the cart.
- Use cart on flat and level surfaces capable of supporting the maximum load capacity.
- Distribute the load evenly. This is especially important when loading and unloading the cart. Always load first from the open, handle end of the cart and unload from wheel end first.
- Cart is designed to be pushed, not pulled. Personal injury could result if cart is pulled due to improper ergonomics.



WARNING: Read carefully and understand all instructions before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury or death.


UNFOLDING THE CART

CAUTION: Wearing work gloves may prevent hand or finger injuries while using the cart.

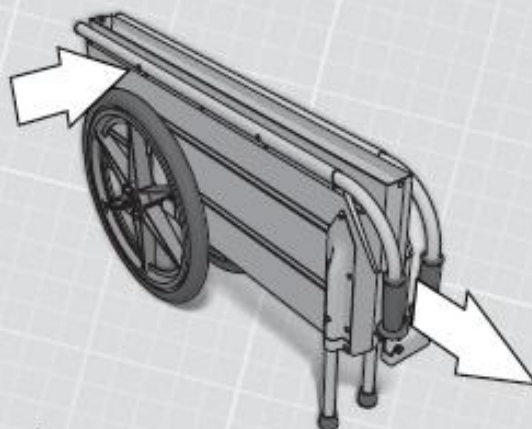


1

With wheels and legs on the ground, press the release button on the rail near the wheel while pulling handle out slightly.

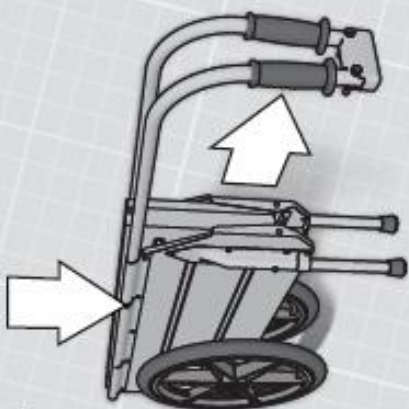

2

Place cart on end as shown. Using the handle grips, pull upward until button locks handles into extended position.

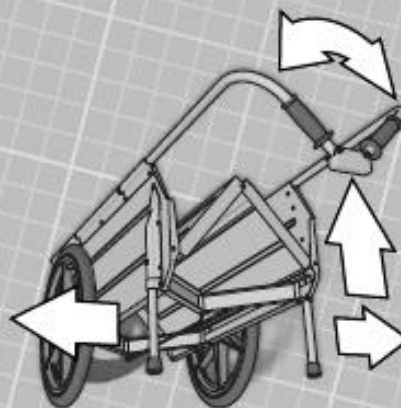


3

Pull legs outward to unfold cart then push handle box until handles are rigid.



4

Push floors down until level. **WARNING:** Do not place hands in the area where the floors meet.

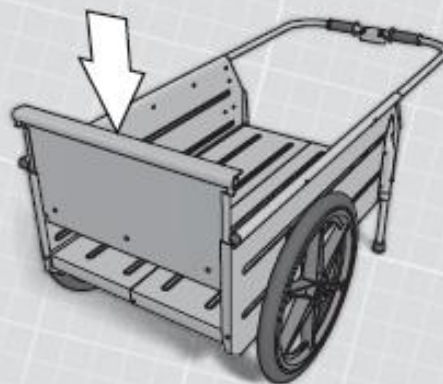


5

Place cart on wheels and legs. Install Front Gate by sliding into the channels. Pushing firmly-one side at a time-lock gate into position by securing the clips over the side bumpers. The Foldit Cart is now ready to use.


FOLDING THE CART

CAUTION: Wearing work gloves may prevent hand or finger injuries while using the cart.

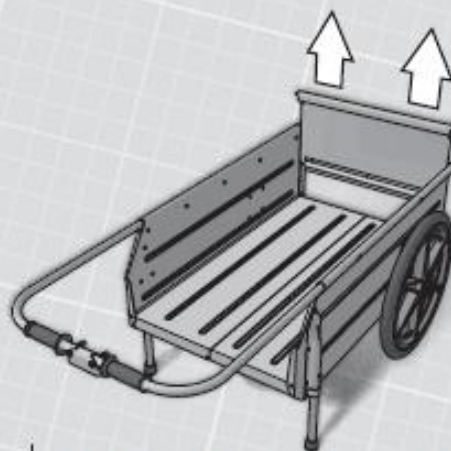


1

With wheels and legs on the ground, carefully remove the Front Gate by pulling firmly -one side at a time- to unlock the gate clips from the bumpers.

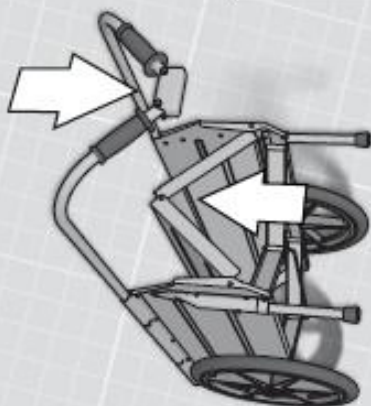


2

Place cart on end as shown. Collapse the cart by pulling one handle grip with one hand and pushing the floor with the other hand at the same time. **WARNING:** do not place hands in the area where the floors join while collapsing.

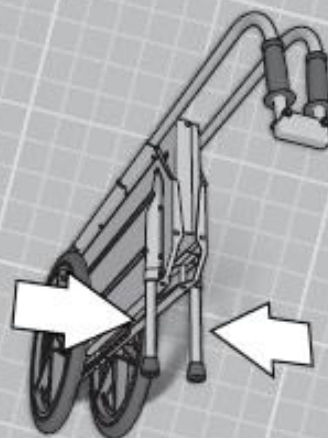


3

Push legs inward to completely fold cart.

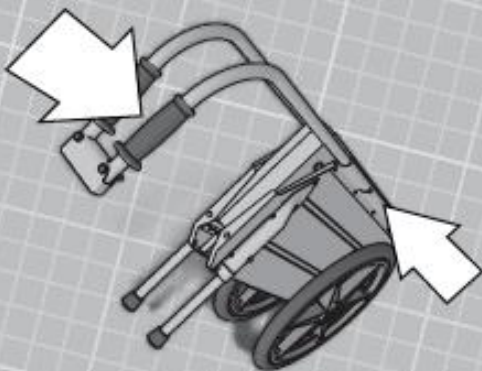


4

To retract the handles, press the release button on the rail near the handles. Push handles downward until the fasteners are secured over the sides of the cart.

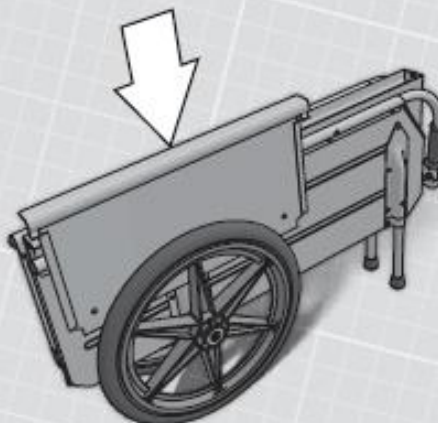

5

Place the Front Gate on the Foldit Cart for easy storage.

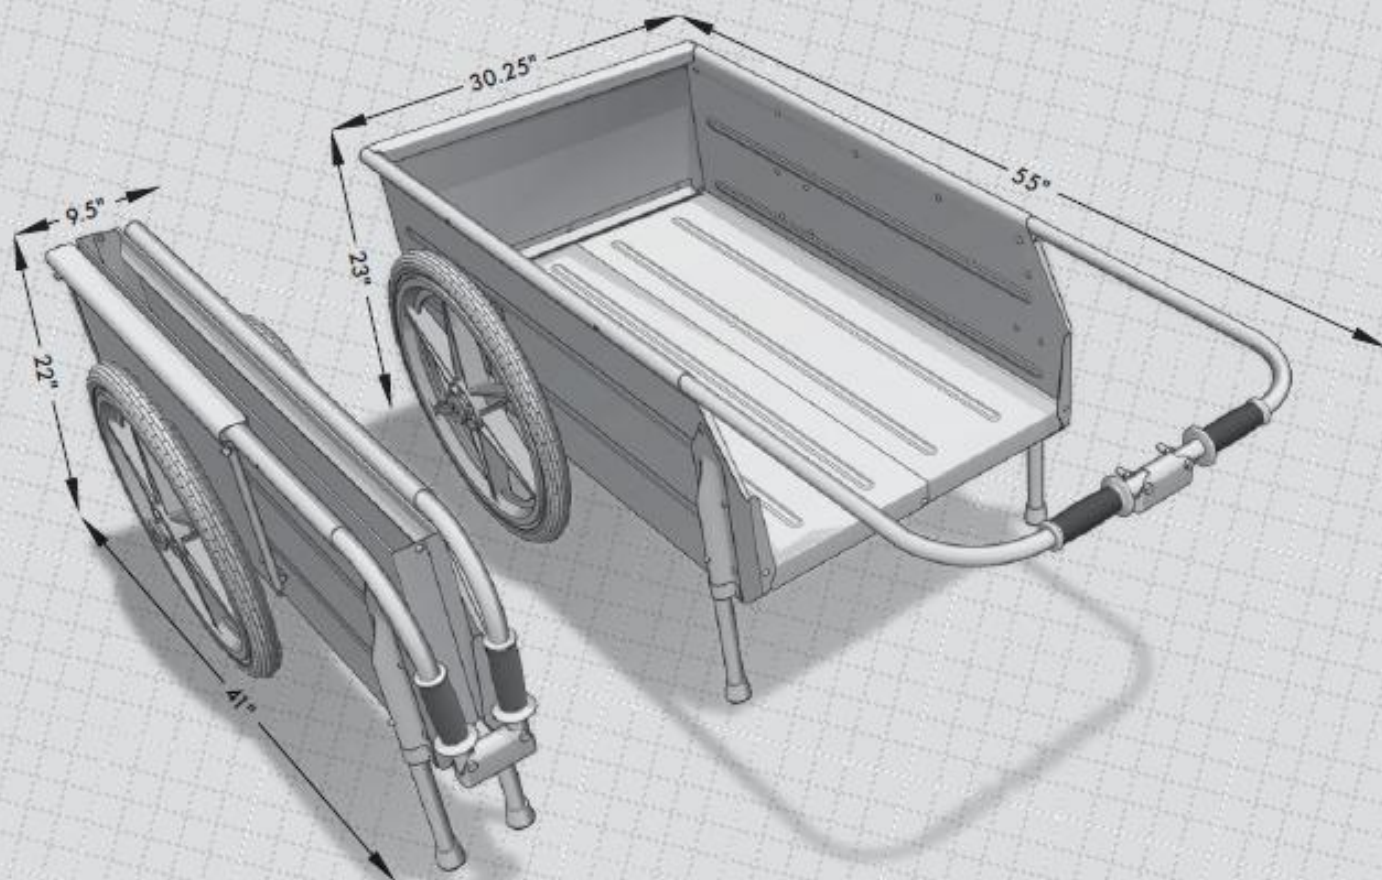

OPTIONAL ACCESSORIES

Standard Rear Gate	5400
Full Height Rear Gate	5500
Trailer Hitch	5600
Bicycle Hitch	5800

REPLACEMENT PARTS

Front Gate	5300
Handle Assembly	8500
Leg Tube Assembly	8700
Axle Insert w/ Wheel Attaching Hardware Set	8800
Crutch Tip	8900
Wheel Attaching Hardware Set	9000

Wheel Bushing	9050
Wheel Assembly, 20\"	
w/Inner Tube & Pneumatic Tire	9200
Wheel Assembly, 20\" w/ Foam-filled Tire	9400
Pneumatic Tire, 20\" x 1.75	9150
Inner Tube, 20\"	9250

TECHNICAL SPECIFICATIONS

Weight Capacity	330 lbs.
Wheels	20 in. with 1 in. Hub Bushings
Tires	20 in. x 1.75
Bed Dimensions	38 in. x 22.75 in. x 11.5 in.
Folded Dimensions	41 in. x 9.5 in. x 22 in.
Unfolded Dimensions	55 in. x 30.25 in. x 23 in.

WARNING:

Only use a hand pump to inflate pneumatic tires and never inflate over 35 PSI. Pneumatic tires are fully inflated before packaging. Tires may lose air over time and require reinflating. Additionally, in extreme heat conditions (above 100 degrees Fahrenheit) a maximum of 30 PSI is strongly recommended.

TWO-YEAR LIMITED WARRANTY

Tipke Manufacturing Co, Inc. shall warrant this Foldit Cart to be free from material or workmanship defects for a period of two years from date of purchase. Tipke Manufacturing Co, Inc. will replace without charge any original part that is determined by Tipke Manufacturing Co, Inc. to be defective. Under the terms of this warranty, however, transportation and labor charges are not covered hereunder. Failure due to accident, abuse or normal wear is not covered by this warranty. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Tipke Manufacturing Co, Inc.
321 North Helena Street
Spokane, WA 99202
Tel. (509) 534-5336
sales@tipkemfg.com